CONSTRUCTOR

THE QUALITY YOU CAN TRUST!

For installation questions, please, call 1-718-499-6200

"PRELUDE" SERIES

HOW TO REVERSE CYLINDERS

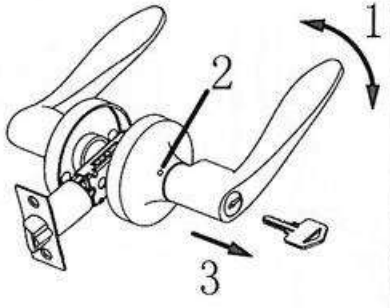

1. Rotate handle (1) until the hole (2) aligns with the button inside.
2. Use a pushpin (not included) to press the inner button.
3. Pull the handle out(3)

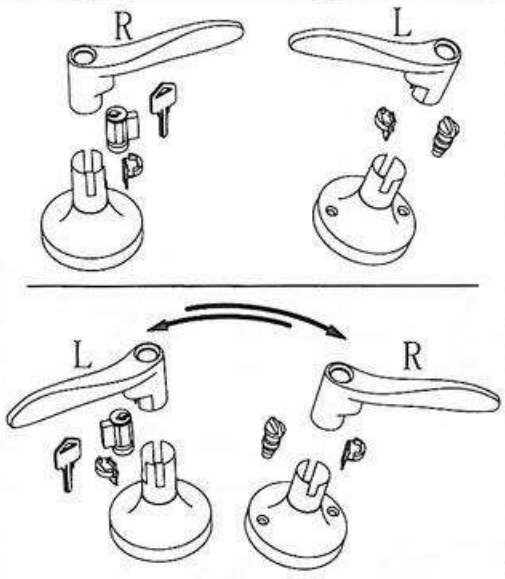

4. Take the cylinder out of the handle and replace with the one from the other side.

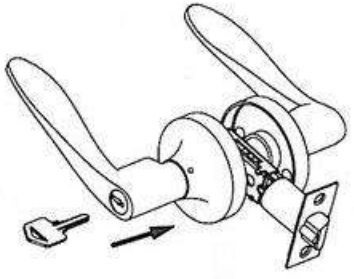

5. Once the cylinder is replaced, push the handle back in until you hear a click.